



Use parts in BAG A. to rebuild modules from the below vehicles


1	D150 1/2 ton P/U 2WD		20	B150 RAM Van
2	D250 3/4 ton P/U 2WD		21	B250 RAM Van
3	D350 1 ton P/U 2WD		22	B350 RAM Van
4	W150 1/2 ton P/U 4WD		23	B1500 RAM Van
5	W250 3/4 ton P/U 4WD		24	B2500 RAM Van
6	W350 1 ton P/U 4WD		25	B3500 RAM Van
7	B150 1/2 ton Van		26	Concorde
8	Ramcharger 2WD		27	LHS
9	B250 3/4 ton Van		28	1995-1996 New Yorker
10	Dakota 2WD		29	Intrepid
11	Dakota 4WD		30	Vision ESI
12	B350 1 ton Van		31	Vision TSI
13	Ramcharger 4WD		32	RAM 1500 Van
14	RAM 1500 1/2 ton 2WD		33	RAM 2500 Van
15	RAM 2500 3/4 ton 2WD		34	RAM 3500 Van
16	RAM 3500 1 ton 2WD		35	Microbus (Mex)
17	RAM 1500 1/2 ton 4WD		36	Ramcharger (Mex)
18	RAM 2500 3/4 ton 4WD		37	Ramcharger 2WD (Mex)
19	RAM 3500 1 ton 4WD		38	Ramcharger 4WD (Mex)



Use parts in BAG B. to rebuild modules from the below vehicles

1	Fifth Avenue		17	Breeze
2	Imperial		18	Town & Country 2WD
3	Lebaron		19	Grand Caravan 2WD
4	1991-1994 New Yorker		20	Caravan 2WD
5	TC Maserati-Import		21	Grand Voyager 2WD
6	Town & Country Van		22	Voyager 2WD
7	Daytona		23	Grand Caravan AWD
8	Dynasty		24	Sebring Convertible
9	Shadow		25	Town & Country AWD
10	Spirit		26	Phantom (Mex)
11	Acclaim		27	Shadow (Mex)
12	Sundance		28	Spirit (Mex)
13	Daytona IROC R/T		29	Breeze (Mex)
14	Cirrus		30	Voyager (Mex)
15	Neon		31	Grand Voyager (Mex)
16	Stratus		32	Stratus (Mex)



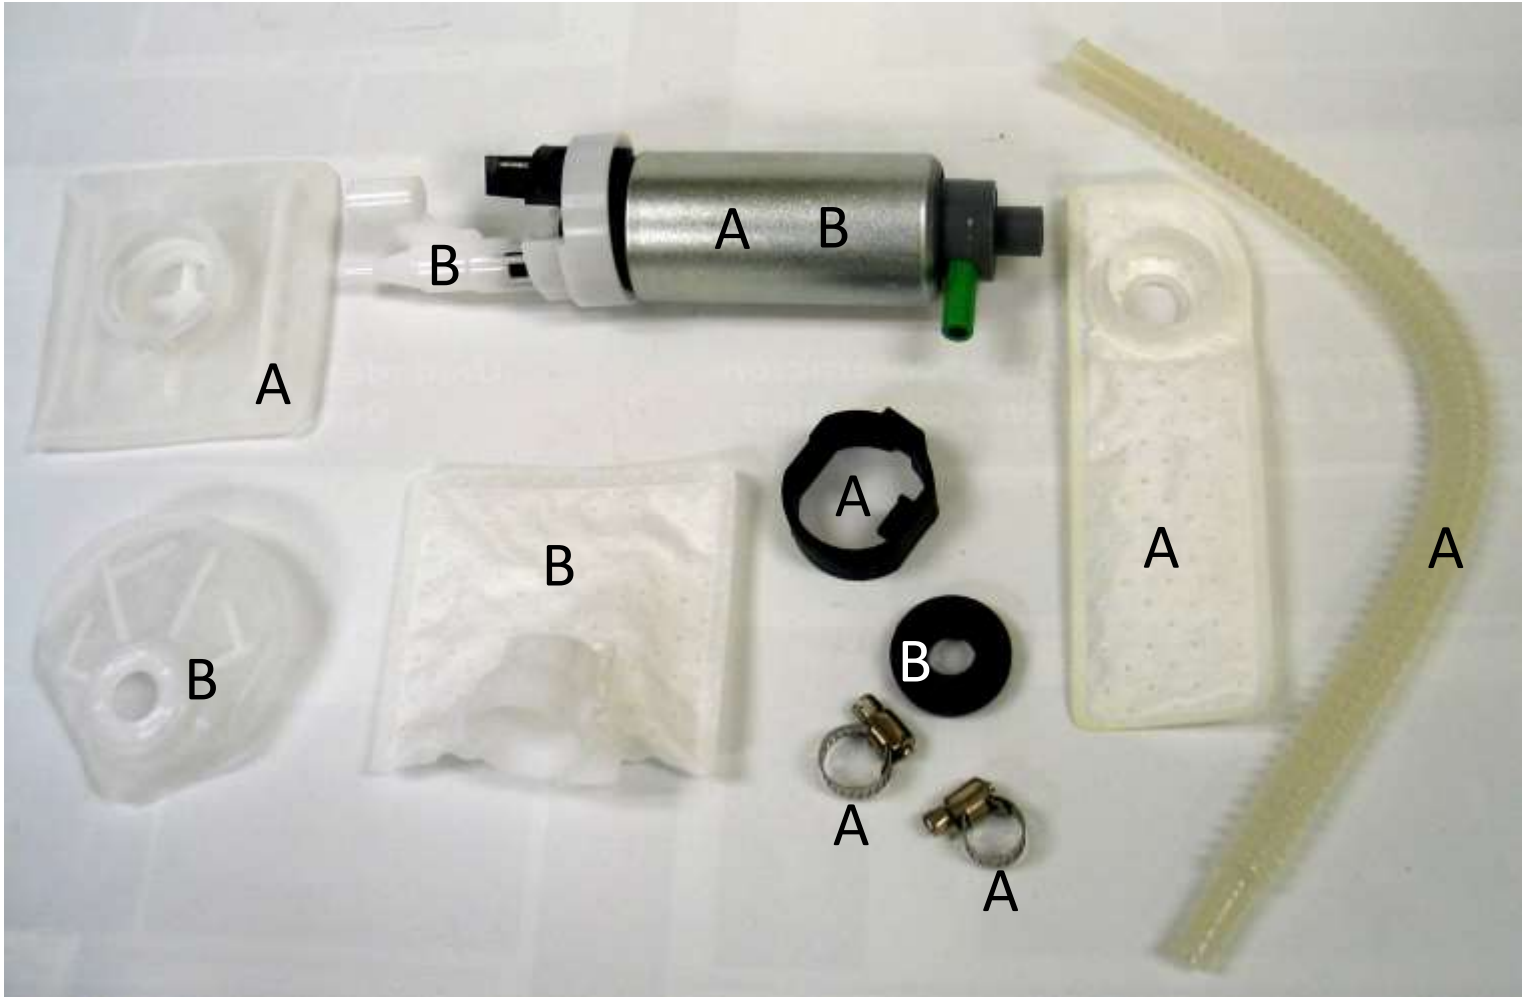


- SAFETY FIRST!!
WORK IN A SAFE AREA AND USE SAFETY GOGGLES AND GLOVES
- MAKE SURE FUEL PUMP IS THE CAUSE OF FAILURE
- REMOVE AND CLEAN FUEL TANK
- REPLACE EXTERNAL FUEL FILTER
- DO NOT REUSE CONTAMINATED FUEL
- PRIME FUEL SYSTEM AFTER FUEL PUMP REPLACEMENT
(SWITCH KEY ON AND OFF 10+ TIMES)

ASSEMBLY INSTRUCTIONS FOR USEP7041 ADAPTER AND HOSE

1. Based on the vehicle application, either the hose or adapter included will be used.
2. Below are the proper assembly instructions for both configurations

ADAPTER INSTALLATION

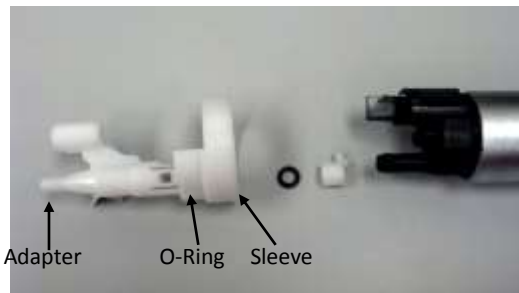

Adapter, O-ring, and sleeve should be assembled in order shown above



Sleeve should be installed first, then O-ring and adapter can be installed as shown

HOSE INSTALLATION



Hose, and hose clamp should be assembled
In the order shown



Hose should be pressed onto nozzle and
hose clamp installed and tightened